

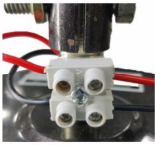



Fan not Working?

01	<p>MCB must not be tripped & the supply switch/button should be "ON".</p>	
02	<p>Regulator should not be on zero speed setting (regulator should be bypassed as recommended). Operate the fan with remote only.</p>	
03	<p>Ensure that the supply cable (Red & Black - Phase & Neutral) - are properly connected with the White OC connector.</p>	
04	<p>Ensure that the supply cable (Red & Black - Phase & Neutral) are properly connected with the White OC connector. (AC supply across the wires at both the points A and B should be within the range of 140V to 285V.)</p>	
05	<p>Crosscheck the efficacy of remote keys by using a mobile camera as shown in image. On pressing the keys, If the LED lights of the remote are not glowing then the remote keys are not working.</p>	